
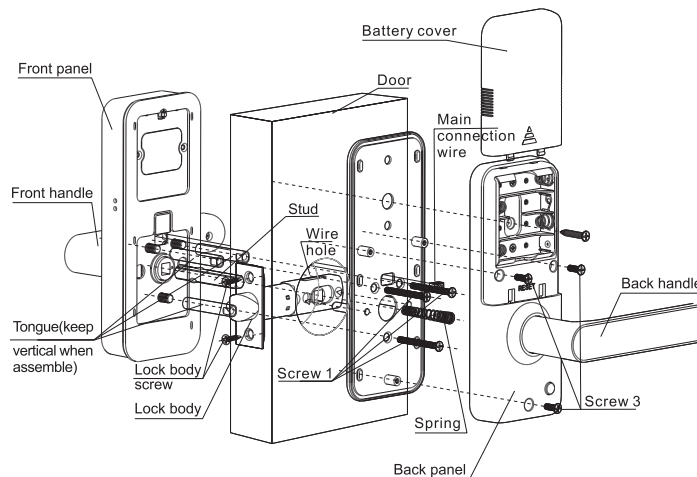




Smart Door Lock ZN-S15

I Product layout:

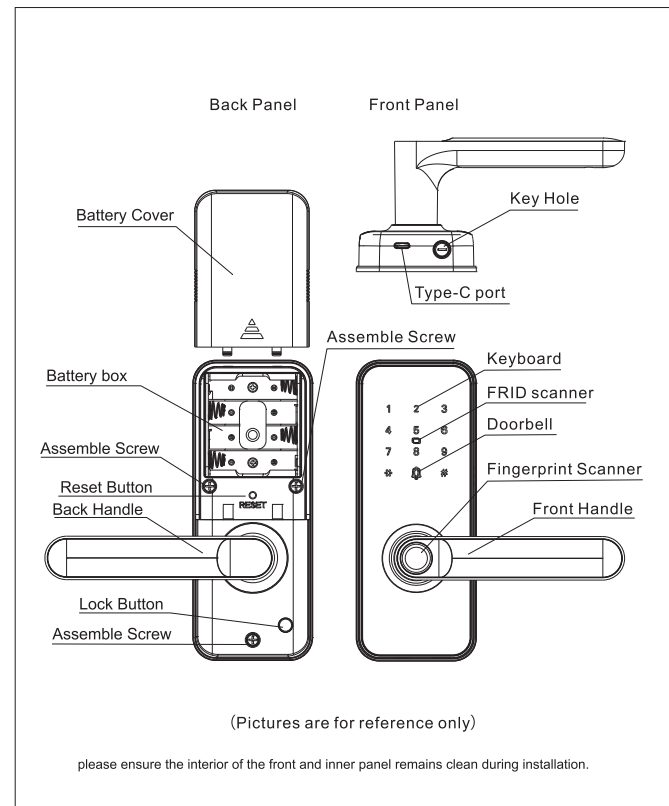


Panel and lock body installation:

1. Door holes: Use hole adaptor to make holes according to size instruction, adjust center distance to 60 or 70 (factory setting 60).
2. Insert lock body into the hole of door, and tight lock body with screw.
3. Install the studs into the screw hole(as picture shows). Put main cable down through the lock body, make panel close to the door face.
4. Fix inner plate and rubber onto the door, and tight with screw 1.
5. Insert the data cable onto the socket which is on inner panel.
6. Change knob direction according to actual door open direction, R is right open, L is left open.
7. Fix the inner panel onto the inner plate, and tight with screw 2.
8. Check knob is normal, if not, back to the step 6.
9. Put battery, batter cover, check all functions, including mechanic keys.

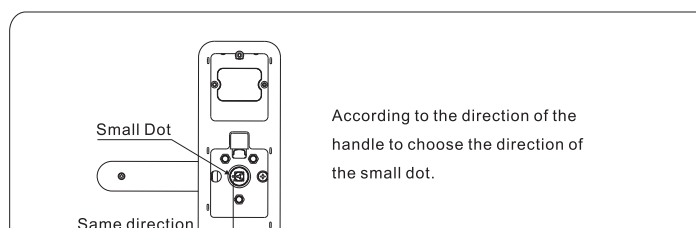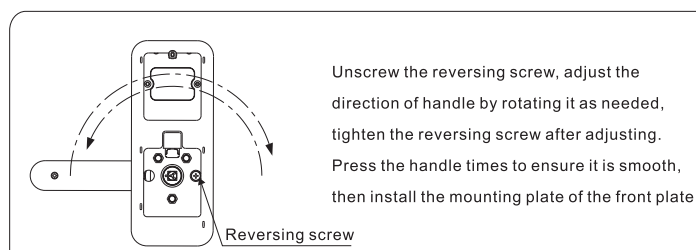

Adjust the back handle

Unscrew the reversing screw adjust the direction of handle by rotating it as needed, tighten the reversing screw after adjusting. Press the handle times to ensure it is smooth.

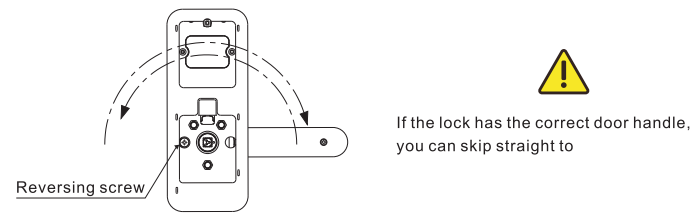

II Product Features(According to actual model)

- Open Way: Fingerprint, Password, IC card, Key, Bluetooth, and etc. Bring new experience to open the door.
- Fingerprint: Advanced semiconductor sensors, 360 degrees identification angle, finger sensor size 108*108, 508 dpi resolution, FRR (fingerprint rejection rate)<0.0001%, FAR(fingerprint accept rate)<0.03%.
- Password: Fashioned touch technology, Allow to put 1-12 digit numbers before and after true password.
- Capacity: fingerprint 50pcs, password 100pcs, card 100pcs (Total 250pcs mixed freely).
- Membership management: The Administrator have the highest right to lock setting (normal member allows to lock and unlock only).
- Alarm function: Low power alarm, Fake passwords alarm, Anti-pry alarm.
- External power supply: Please use power source or other equipment which is 5V to recharge for emergency when low power (Replace new battery once door is open).

III Remark:


1. Please reset factory default and clear all member records immediately after lock installed.
2. Please use different and more angle when input fingerprint. Do attention to do with no hard.
3. We suggest to change battery at least in 6 months, in order to avoid smart lock damage because of exhausted battery.
4. The lock use 4*AA alkaline battery, When first time alarms "low battery, please replace battery", it can be open around 50 times more, But please replace immediately in order to avoid any inconvenience.
5. By continuous 5 times wrong input with fingerprint/password lock will alarm, and locked for 90 seconds.

V User Guide


(Product iterations may vary, please refer to the actual menu for details):

- Initialization Operation:
Remove the battery cover, use a pin to press and hold the "RESET" button above the battery compartment on the rear panel for about 6 seconds until the voice prompt says, "Initialization operation successful."



● Administrator Settings:

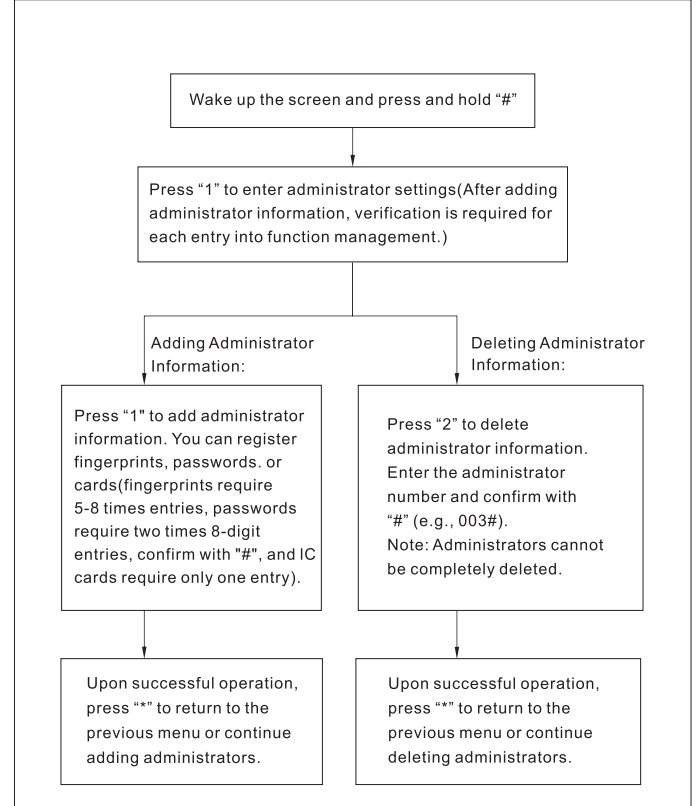


● Users Settings:

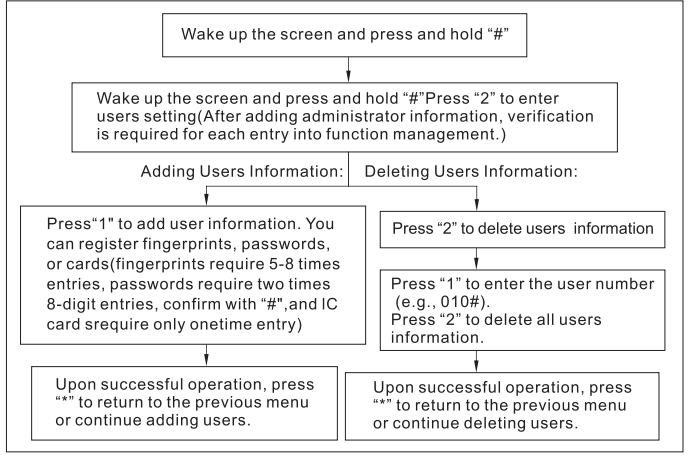

● System Settings:

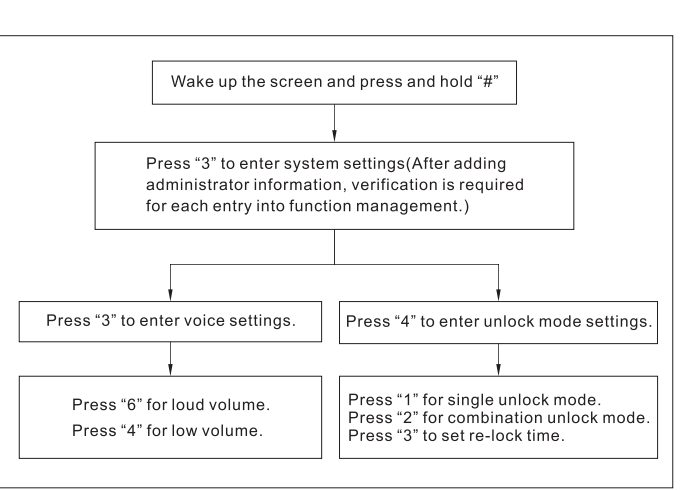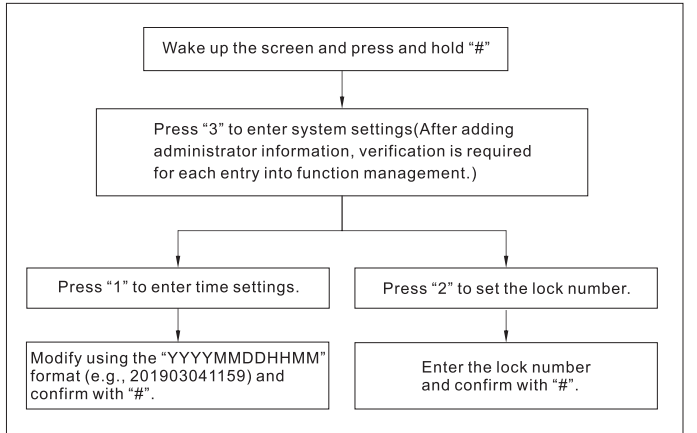

● Factory Reset:

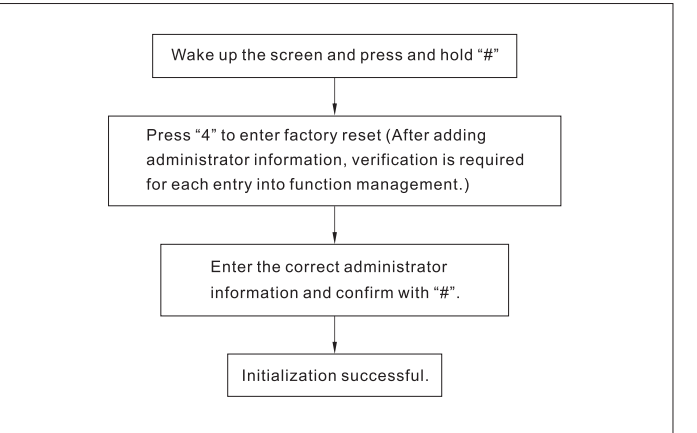

● Information Query:

